


Seletek system chart as of software 1.8 /firmware 1.1 (jan 2009)

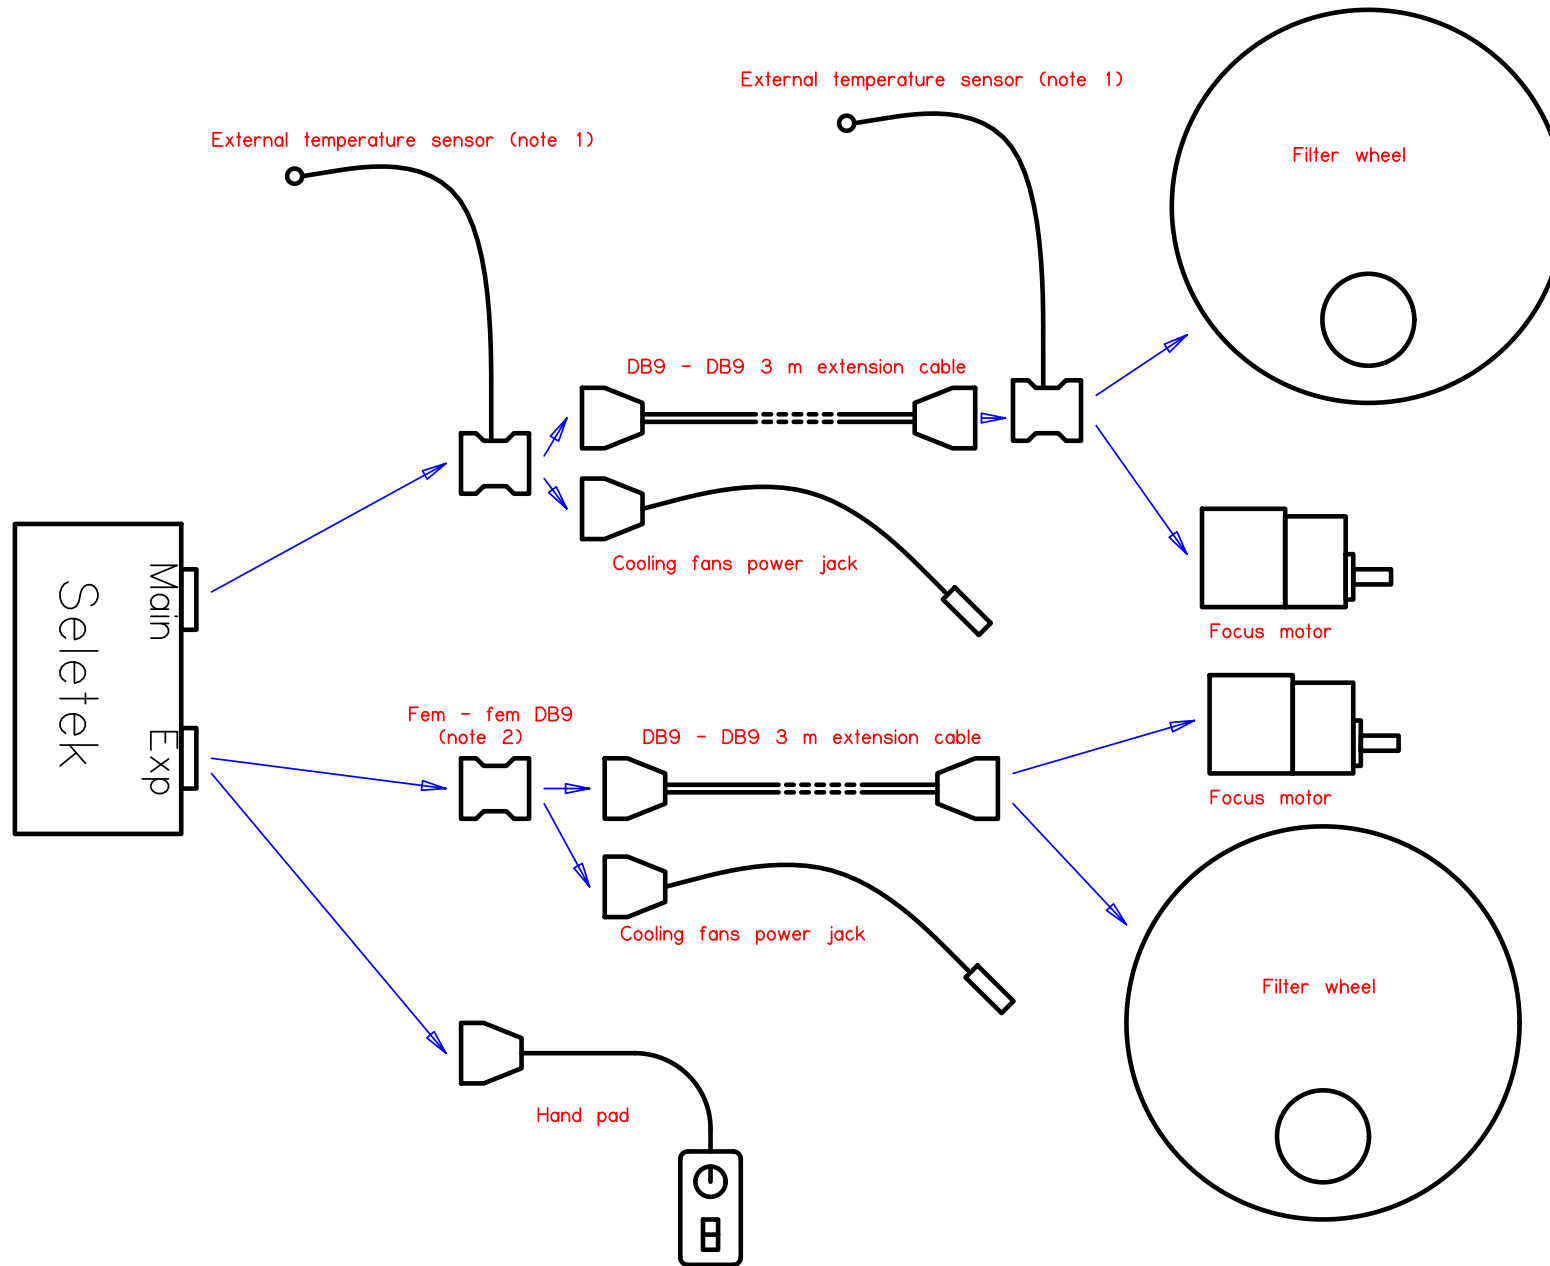

Note 1: external temperature sensors optional; only 1 external sensor can be used at any time

Note 2: DB9 female - female only needed if purchasing standard cables, no needed for DIY